



**MICRO**



SMALL FORMAT LASER CUTTING & ENGRAVING SYSTEMS

# MICRO - Small Format Laser System


The small format MICRO Laser System is an entry level machine with all the same capabilities of the larger systems offered by Kern. The class IV, open bed design gives you the control and ease of use that many enclosed systems lack. The X axis features the same high-speed engraving as our HSE model and the Y axis is a moving table that increases the accuracy and speed while cutting. Like all Kern systems the MICRO is a turnkey package including the computer, software and downdraft vacuum system.

## MICRO24

Cut/Engrave Area	24" x 24"
Footprint (W x L x H)	46" x 44" x 24"
System Weight	500 lbs

## MICRO48

Cut/Engrave Area	48" x 24"
Footprint (W x L x H)	70" x 44" x 24"
System Weight	800 lbs

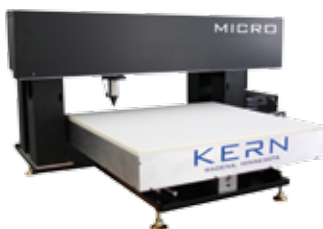

## MICRO24, MICRO48

Laser Wattages	30, 50, 100 and 150 watts
Table Accuracy	+/- .004"/ft
Repeatability	+/- .0005"/ft
Straightness	+/- .002"/ft
Air Assist Nozzle	Yes
Max Cutting Speed	10"/sec
Max Engraving Speed	150"/sec
Vacuum Table	Yes
*Maximum Z Clearance	3"
**Metal Cutting Available	Yes

\* Z clearance is 3" from the honeycomb bed and up to 7" by removing the honeycomb.

Custom gantry heights are available.

\*\* Need at least 100 watts. Top engraving speed is 130"/sec.

## Standard Features

### USA Made Laser Head

All lasers sold by Kern are designed and manufactured with pride in the USA.

### High-Speed Servo Motors

The MICRO motion package is powered by servo motors on both axes allowing for engraving at speeds up to 150"/sec with 5G's of acceleration.

### Downdraft Table / Vacuum System

Smoke, fumes and small debris are all removed by a vacuum system that pulls from both below and above your material. A downdraft vacuum will hold your material down to the table while it is being cut and engraved.

### Computer and Laser Software

A high performance computer and monitor are provided with each laser system. Kern's state-of-the-art KCAM laser cutting and engraving software is included on every laser system. An easy to use printer driver will send your vector and raster files to the laser. Upgrades to the KCAM software are always free of charge and readily available on our website. Your choice of design software such as CorelDRAW®, AutoCAD LT® or Adobe Illustrator® is also included.

### UL / CE / CDRH

A UL certified electrical panel is placed on each laser system which turns on and shuts down components of the laser system. MICRO laser systems are CE compliant to meet European Union consumer safety, health and environmental requirements. U.S. CDRH compliance requirements are upheld on the MICRO laser system to meet specifications in 21 CFR, Subchapter J, parts 1040.10 & 1040.11.

### Chilling Unit

A closed loop chilling unit is included on all laser systems of 100 watts or greater. This chilling unit will keep your laser head cooled and running smoothly.

### Quality Bearings, Rails and Belts

A top-of-the-line motion package includes parts selected from US companies that value the idea of high tolerances, great repeatability and precision accuracy.

### Small Footprint

The small format MICRO laser system will fit through a standard 36" doorway.



1501 INDUSTRIAL DRIVE  
WADENA, MN 56482

218-631-2755 TEL  
888-660-2755 TOLL FREE  
218-631-3476 FAX